





# Inlet Water Valve Kit Manual

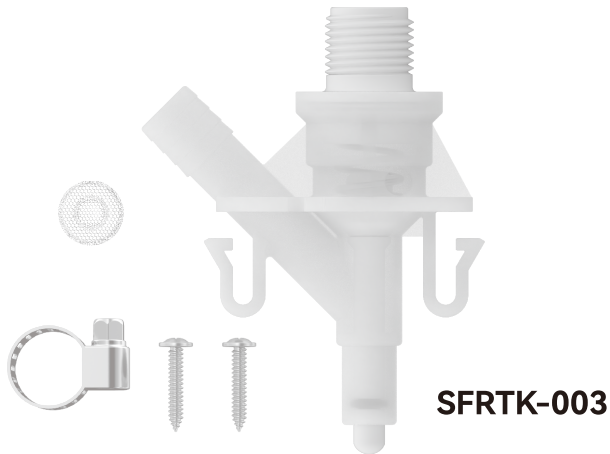

## FEATURE & BENEFIT

- Toilet water inlet valve kit replacement for SEAFLO residential RV toilets
- Use high-quality materials to extend the service life of the valve
- Package includes :1 x RV toilet inlet water valve, 2 x new mounting screws,1 x hose clamp, 1 x stainless mesh filter
- Quality material: this water valve kit made of quality PP plastic material, sturdy construction to prolong the serve life and performance of this RV toilet parts; Nicely fix and fit your toilet's hardware
- Applied for: the RV toilet valve parts are compatible with Dometic 300/ 310/ 320 RV, Camper, trailer toilets, very practical
- Easy to use: you just need to snap the RV flush valve in, secure with 2 screws, and reconnect water lines; Make it easier on yourself if you don't have ample room behind your toilet and use a mirror (or your phone in selfie mode) so that you can see the back of the assembly
- Warming tips: check part numbers to ensure proper fit; During the installing the RV water valve, please insure to install button with the correct angle in case that being broken


## DIMENSION DRAWING

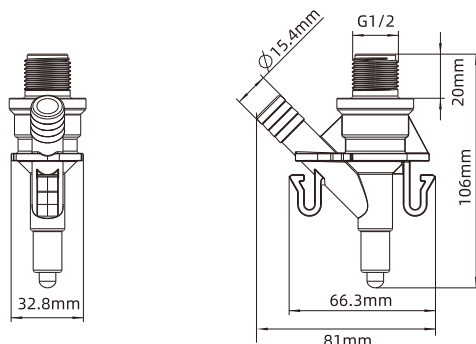

## INSTALLATION

### Removal and installation

Remove the clamp with a screwdriver, take out the pipe, remove the screws on the upper and lower sides of the inlet valve, pry out the inlet valve with a screwdriver, then install the new inlet valve, tighten the screws, insert the pipe, and lock the clamp

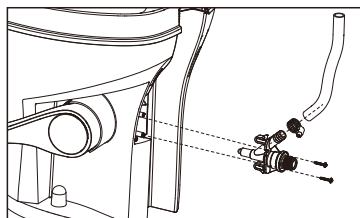


### Preventing a Frozen Water Valve

Identifying a Damaged Water Valve

- ① Freeze Damage
- ② Water Valve Damage

These toilet water valves exceed the applicable standards for maximum water pressure as defined by the North American plumbing code agencies. However, if trapped water freezes in the piping that supplies water to the toilet, it expands and creates extremely high pressure that can damage the valve.

If the freeze damage indicator window (1) has white stress marks, it indicates freeze-damage. Water valve damage is due to severe exposure to below-freezing temperatures.

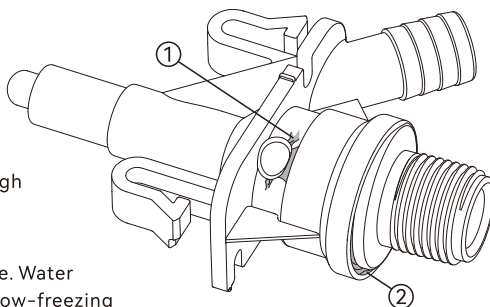

To avoid damage, winterize the toilet as described in this manual. If freeze damage occurs as a result of improper winterization, replace the water valve with seaflo toilet water valve kit.

If the water valve is returned for a warranty claim, SEAFLO reserves the right to deny the claim if the problem is caused by freeze damage.

Use nontoxic antifreeze (propylene glycol) designated for potable water systems .

When a toilet may be exposed to temperatures below freezing, the toilet must be winterized using the “Non-toxic Antifreeze Winterization Method” or the “Drain Water from the Toilet Method” . When a toilet is stored for long periods of time, or the water becomes stagnant, flush the system using the “Drain Water from the Toilet Method” .